



INSTALLATION GUIDE FOR PL-122/PL-525/PL-625 FILTERS


INSTALLATION INSTRUCTIONS

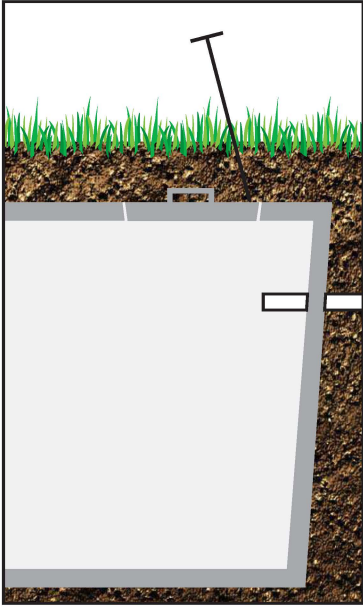

Step 1:
 (A) Locate the outlet of the tank.
 (B) Remove tank cover and pump tank if necessary.

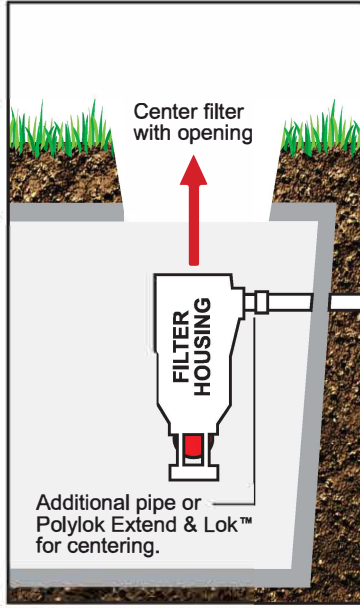


Step 2:
 (A) Before installation, place the filter housing on to the outlet pipe.
 (B) Make sure that the housing is positioned so the filter can be removed from the tank for maintenance and service.

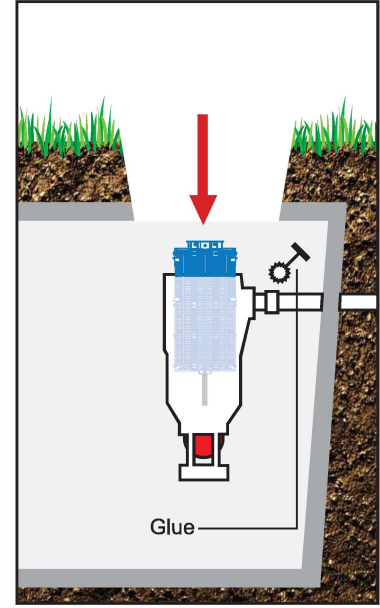

Step 3:
 (A) Glue the filter housing on the outlet pipe.
 (B) Insert the filter cartridge in the housing, making sure the filter cartridge is properly aligned and completely inserted in the housing.


MAINTENANCE INSTRUCTIONS

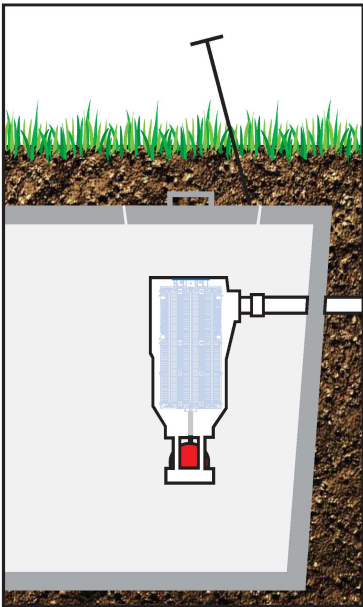


Step 1:
 Locate the outlet of the septic tank.

**DO NOT USE PLUMBING
 WHEN FILTER IS REMOVED**

**USE RUBBER GLOVES
 WHEN CLEANING FILTER**

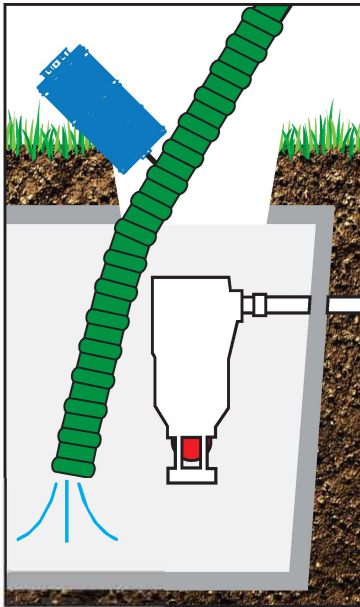

Step 2:
 (A) Remove tank cover and pump if necessary.
 (B) Pull the filter out of the housing.
 (C) Hose off the filter over the tank. Make sure all solids fall back into the tank.

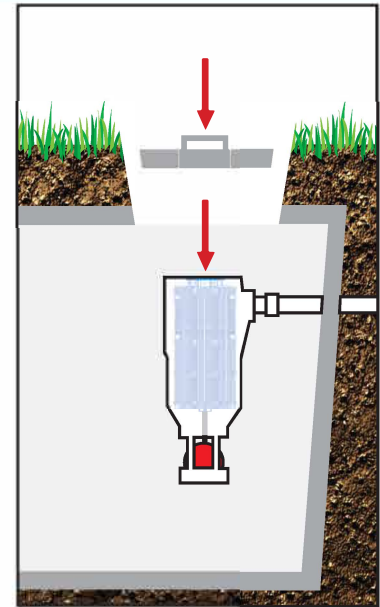

Step 3:
 (A) Insert the filter cartridge back into the the housing making sure the filter is properly aligned and completely inserted.
 (B) Replace tank cover