

# POLYLOK WASTEWATER PRODUCTS

## D-Box Seal Installation Instructions



### Tools Needed

- A sharp blade no wider than 1/2"
- Grease or lubricant for blade



Works well with  
Polylok  
Roto-Flows.



110mm

**When the D-box is supplied with the holes precut skip Step 1**




Lubricate your blade and cut following the angle of the circle impressions.



Slide the seal into place from inside of the D-Box and tighten nut from the outside.



Check to make sure you have completely tightened the nut and that the seal is not loose on the D-Box.

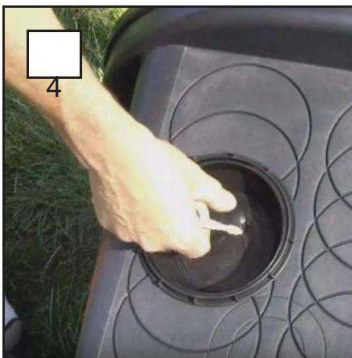


To open the seal tabs use a key or screwdriver to start the pull tab for the correct pipe size.  
**(TEAR OUT- DO NOT CUT OUT)**



Once you have started the tear use your hands to pull off the rest of the seal tab.  
**(TEAR OUT- DO NOT CUT OUT)**



You are now ready to insert the correct size pipe by pushing it through the flexible watertight D-Box seal.

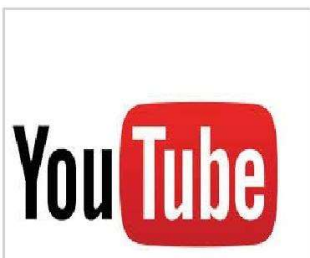

**Click on [www.YouTube.com](http://www.YouTube.com)**

1. In search bar type in "Polylok D box"